

TECHNICAL DATA SHEET




Part#: 530E-5-USL-040

.

Cutters - Standoff Shear Small Frame - .040" Standoff - Narrow Jaw Reduces shock on delicate components and solder connections. Long ergonomic cushioned ESD safe handle.

The 530E-5-USL-040 6" narrow anti-shock shear cutter reduces shock on delicate components and solder connections. The "Stand-Off" keeps the cutting blade from cutting into the solder connections. The tip width is .090". It's recommended cutting capacity is 22 AWG (.25" soft wire). It features a soft cushioned ergonomic Anti-Static grip (10¹⁰ ohms/sq surface resistivity) with dual leaf springs.

Carbon
10 ¹⁰ ohms/sq
Straight
Shear
.025″
.095″
0.42" (10.5mm)
6" (150mm)
6.2
662847013256
8203.20.60.30
EAR99
27111511
USA
Small Frame

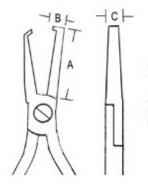

EXCELTA

530E-5-USL Anti-Shock, Standoff Shear Cutter-Long Handle

A= .640" B= .100" C= .095"









