

**TECHNICAL DATA SHEET** 




Part#: 530E-US-050

.

Cutters - Standoff Shear Small Frame - .050" Standoff Reduces shock on delicate components and solder connections

The 530E-US-050 shear action cutter reduces shock on delicate components and solder connections. The "Stand-Off" keeps the cutting blade from cutting into the solder connections. The tip width is .140". Recommended cutting capacity 22 AWG (.025") soft wire. It features an ergonomically molded antimicrobial Anti-Static grip (10<sup>10</sup> ohms/sq surface resistivity) with dual leaf springs.

Precision Level Material	★★★★★ Carbon
Surface Resistivity	10 <sup>10</sup> ohms/sq
Shape	Straight
Type of Cut	Shear
Cutting Capacity	.025″
Blade Angle	
Blade Length	.145″
Body Width	0.42" (10.5mm)
Body Height	
OAL	5" (125mm)
Weight (OZ)	6
UPC	662847013188
Schedule B	8203.20.60.30
ECCN	EAR99
UNSPSC Code	27111511
Country of Origin	USA
Group	Small Frame
-	

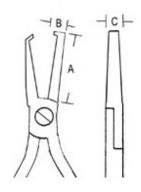

EXCELTA

530E-US Anti-Shock, Standoff Shear Cutter

MADE IN

USA

A= .650" B= .115" C= .145





